

# American DJ® *User Instructions*

## **Fearsome** **4**<sup>TM</sup> / *System*



*CAUTION! Read instructions before installing or plugging unit in.*

### *SPECIFICATIONS:*

#### **Fearsome 4<sup>TM</sup> / System**

**Weight:** 32 lbs. total  
**Size:** 11"H x 5"W x 16"L  
**Lamp:** 4 x ZB-64514 120V 300W  
(1 lamp per each unit)  
**Fuse:** 10A  
**Voltage In:** 120V  
**Working Position:** Any Safe position  
**Duty Cycle:** None  
**Colors:** 8 Colored Lenses

#### **HALOGEN LAMP WARNING!**

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

*CAUTION! - It is recommended that you plug the slave units directly into the rear of the master unit.*

Thank you for purchasing the Fearsome 4<sup>TM</sup>/System by American DJ®. For your convenience the Fearsome 4<sup>TM</sup>/System has been lamped and ready to be used; there is no assembly required. Please read the following instructions before installing or using your new Fearsome4<sup>TM</sup>/System.

#### Operating Instructions:

Units are ready to be hung or set on flat surface. Connect Fearsome 4<sup>TM</sup>/Slave units to the Fearsome 4<sup>TM</sup>/Master which has a dial on the back which allows sensitivity adjustment. Turn knob counterclockwise for higher sensitivity.

**Caution!** Never open units when in use. Always disconnect main power before servicing or replacing lamp. Remember, always replace with same lamp and fuses.

**Lamp replacement:** Disconnect power. Open trap door on front of unit. Remove and replace lamp.

Service only at an authorized American DJ® Dealer.